



NAVIGATION AV SYSTEM

AVIC-F910BT AVIC-F710BT AVIC-F9110BT

Quick Start Guide


This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to the operation manual.

Basic Hardware buttons




- ① **MENU button**
Press to display "Top Menu".
- ② **MAP button**
Press to view the map screen.
- ③ **MULTI-CONTROL**
Rotate to adjust the AV (Audio and Video) volume. On the map screen, move up or down to change the map scale. Move left or right to skip backward or forward the track or chapter, etc.
Note:
These are just a couple of examples.

Switching the screen

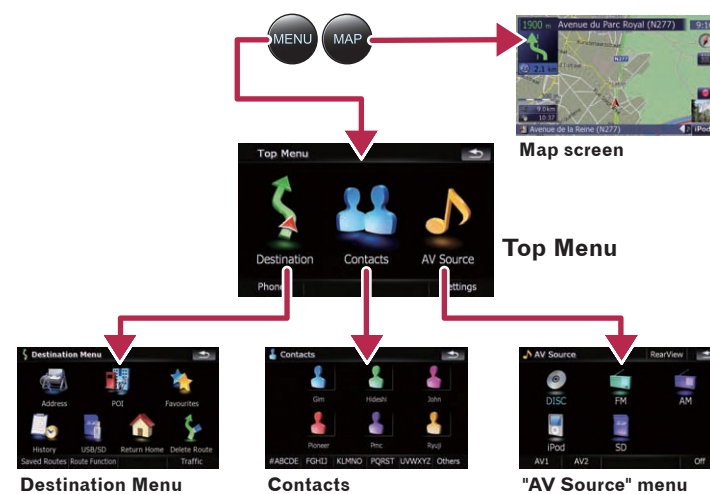

Search function overview


This navigation system provides multiple search methods.

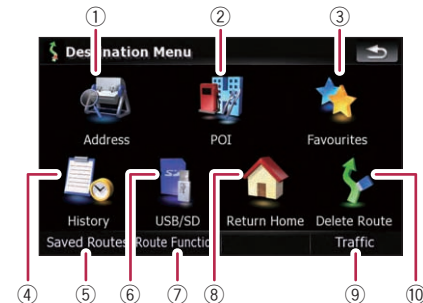

- ① Searching for location by address
- ② Searching for a place from stores, restaurants, and other businesses in the points of interest database
- ③ Selecting your stored location
- ④ Selecting a destination you searched for recently
- ⑤ Selecting a route from a stored route
- ⑥ Searching for POIs by using the data on external storage (USB, SD)
- ⑦ Viewing the current route information, searching for a destination by latitude and longitude and storing the current route
- ⑧ Set a route to your home
- ⑨ Viewing the traffic information
- ⑩ Cancelling your current route


Searching for your destination by address

- 1 Display **Destination Menu** and touch **Address**.
- 2 Input the information that you want to set as the destination.

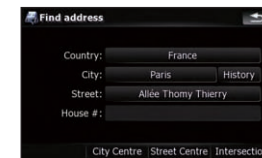

Touching the item next to each option displays the screen to enter the character or select one of options. After narrowing down your destination, "Map Confirmation screen" will appear.


- 3 Touch **Route...**

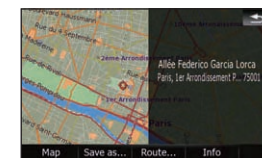

Setting the voice guidance volume



- 4 Touch **Go Here Now**.

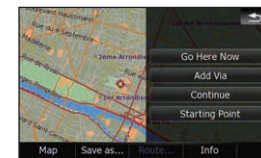

When route calculation is completed, navigation guidance begins.



This navigation systems gives you route guidance both visually and by voice.

Basic operation on the map screen

Basic items on the map

① 1900 m Avenue du Parc Royal (N277)

② 9:11

③

④ 2.1 km

⑤ 9.0 km 10:32

⑥ Avenue de la Reine (N277)

① Information for the next guidance point

② Current time

③ Compass

④ Current route

⑤ Current position

⑥ Current road

Scrolling the map

Dragging the map allows scrolling. The scroll speed will change depending on your drag speed.



3D map screen


Touch to change the view, touch the key again to change to 2D map screen (Heading up mode).



Touching the 3D map shows the key for changing the 3D map tilt and rotation angle.

Selecting the AV source

1 Display "AV Source" menu and touch the key to select your desired AV source.

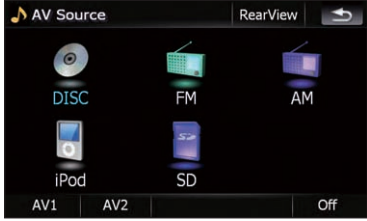


The AV source is disabled if the equipment is not connected or inserted.


Playing files from a SD memory card

You can play an audio and video file on a SD memory card. (For details about playable files, refer to "Operation Manual".)

1 Push the dummy SD card until it clicks and pull out the card.



2 Insert your SD memory card until it clicks.



3 Touch keys to operate the music/video source.




- ① Playback control
- ② Move to the previous or next folder.
- ③ Switch to the screen for video control.

Playing your Apple iPod

You can control an iPod by connecting the USB interface cable for iPod (CD-IU230V) (sold separately) to the navigation system.

1 Connect your iPod.

To AV input on the backside

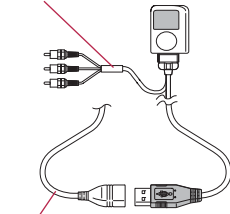

USB connector

2 Switch the AV source to iPod.



Music control



- ① Touch one of the categories in which you want to search for a song or Video.
- ② Touch to switch between the video screen and the music screen.
- ③ Playback control

Video control

Touch **Video** to switch to the iPod-video screen.

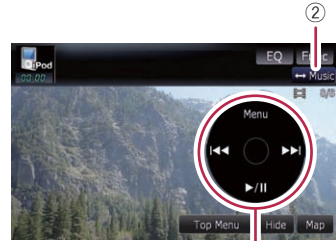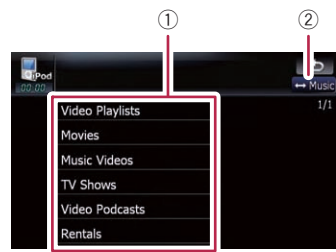


Pairing your phone

1 Activate the Bluetooth function on your phone.

2 Touch the key in the following order in **Top Menu**; **Phone** → **Phone Settings**

3 Turn **Bluetooth On/Off** to On.

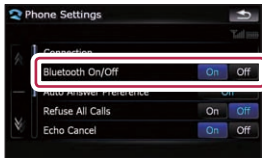


4 Touch the keys in the following order; **Connection** → **Add Device** → **Search devices**

The system tries to find and lists nearby devices.

5 Touch your phone on the list and then enter the PIN code from your phone. (1111 is default).

When the pairing is successful, the message will appear.

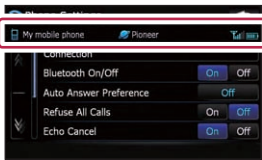

Transferring the phone book

1 Touch **Phone Book Transfer** on **Phone Menu**.



2 Touch **OK** to enter the waiting screen.

3 Operate your phone to transfer the phone book entries during waiting screen.



4 After transferring, touch **OK**.

When the transferring is successful, "**Completed data loading!**" will appear.